Installation Instructions SSG4REM Cylinder with Remote Driver - Pendant Mounted

WARNING

Risk of electrical shock. Disconnect power before servicing or installing luminaire.

WARNING


Risk of injury or damage. Luminaire will fail if not installed properly. Follow installation instructions.

🛕 WARNING


Risk of injury. Wear safety glasses and gloves during installation and servicing. Allow ample time to cool before handling.

IMPORTANT SAFETY INSTRUCTIONS

- Read all installation instructions before installing. It is important to save these instructions.
- Only install and connect LED module with power disconnected at the circuit breaker. Hot plugging, or connecting the module with power
 on, could damage the LEDs and is not covered by warranty.
- Observe and follow all label information and instructions regarding dry, damp and wet location listings, proper Intense LED module, warnings of installation near combustible materials and/or insulation.
- Be sure to connect ground wire to prevent electric shock or other potential hazards.
- The product must be installed in a manner consistent with the intended use and in compliance with the national electrical codes and local
 codes by a person familiar with the construction and operation of the product and the hazards involved.
- Do not block the trim aperture as this may cause unsafe operating conditions.
- WARNING: Use only Intense Lighting trims listed for use with this fixture. Use of trims other than those listed by Intense Lighting is a violation of N.E.C 110-3(B) and voids all warranties.

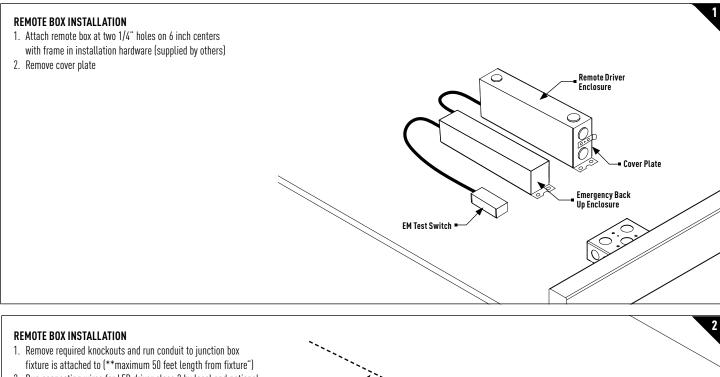


- 2. Run connecting wires for LED driver class 2 by local and national electrical regulations, minumun 18 awg wire and at maximum 50 feet length
- 3. Make electrical connections (See Page 5)
- 4. Reinstall cover plate with supplied 8-32 hardware, insure wires are clear of box edges not pinched or damaged when cover is screwed down

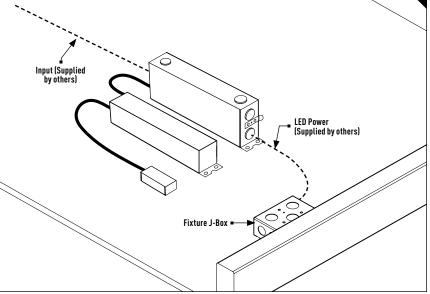

INSTRUCTION L/M-0801:18 P-1


INTENSE LIGHTING | 3340 E La Palma Ave, Anaheim, CA 92806 | tel 714 630-9877 | fax 714 630-9883 For Intense Lighting's limited product warranty, go to www.intenselighting.com. For a printed copy of the warranty, you may call 800 961-5321. © 2018 Intense Lighting, LLC. All rights reserved. Note: This document is subject to change without notice.



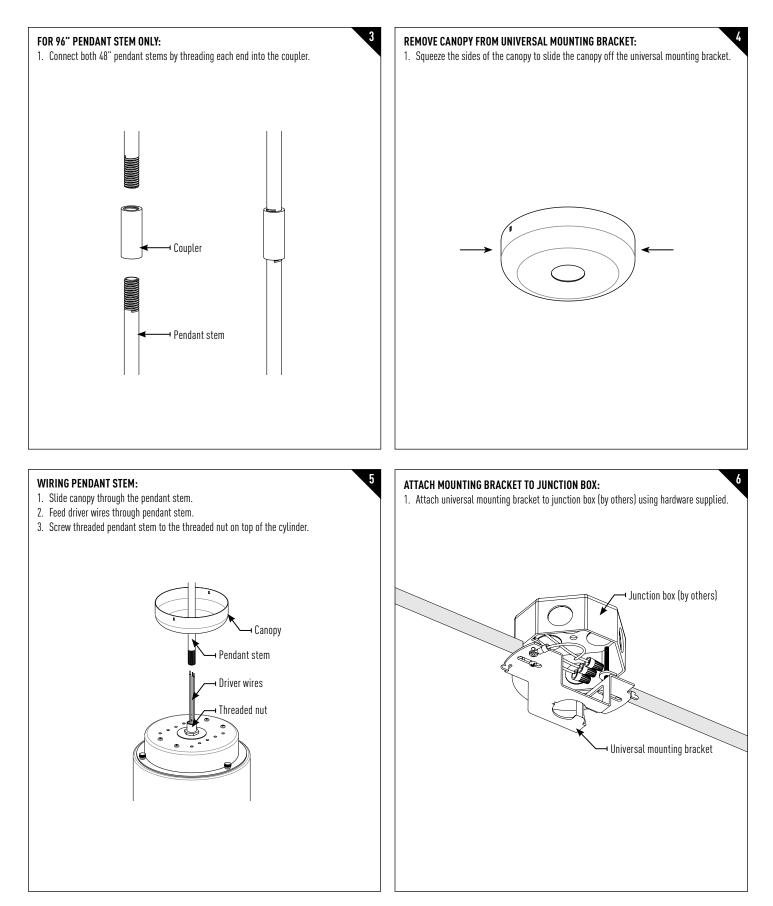


INSTRUCTION L/M-0801:18 P-2



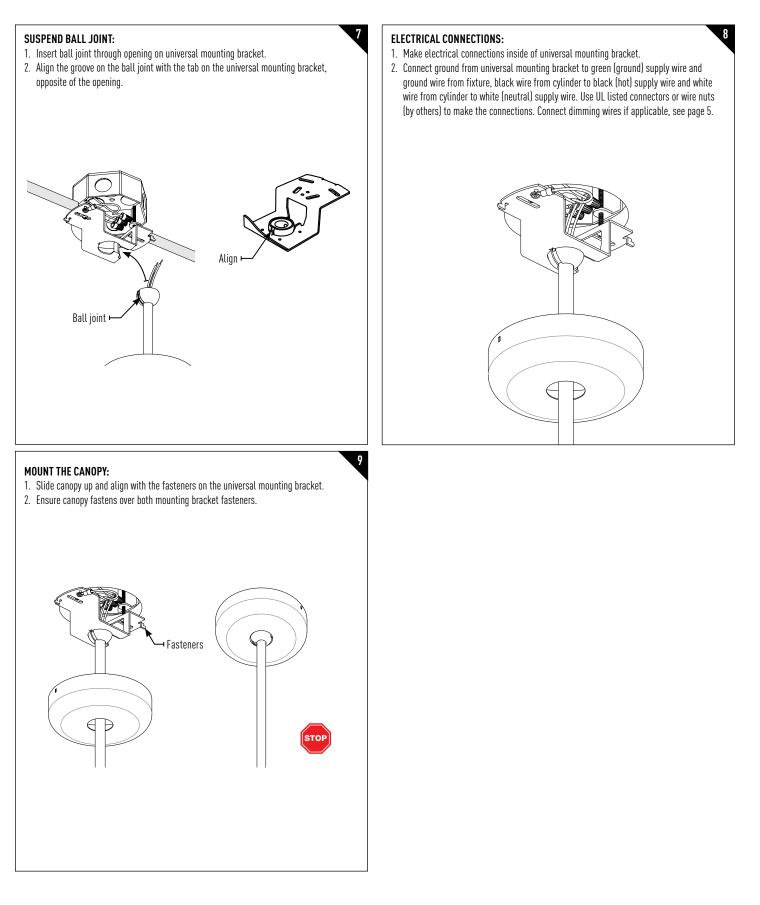


INSTRUCTION L/M-0801:18 P-3



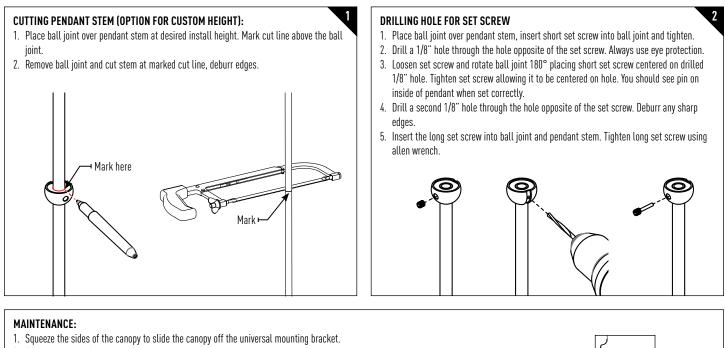

- 2. Disconnect wires from junction box.
- 3. Remove ball joint and pendant stem from universal mounting bracket.
- 4. Remove all three thumb screws on the top of the cylinder and disconnect the quick connect from the driver.
- 5. Remove two 8-32 nuts from the driver plate and set aside.
- 6. Replace new driver on driver plate, see wiring diagram on page 4.

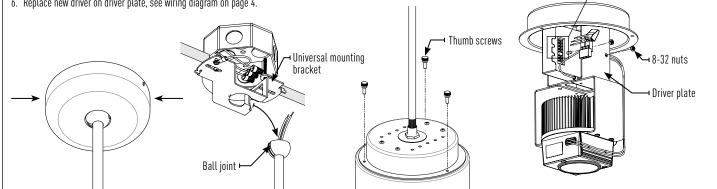

INSTRUCTION L/M-0801:18 P-4




Dimming Capability

0-10V DIMMING (10% Dimming, eldoLED 1%, eldoLED 0.1%)

- 120V/277V
- Dims down to 10% light output
- Consult dimming manufacturer for installation instructions and power packs

COMPATIBLE DIMMERS

<u>Part Number(s)</u>
PS-010-IV-120V, PS-010-WH-120V, PS-010-3W-IV-120,
PS-010-3W-WH-120V, PS-010-IV-277V, PS-010-WH-277V,
PS-010-3W-IV-277V, PS-010-3W-WH-277V,
FD-010: PS-IFC-010-IV, PS-IFC-010-WH-120/277V,
FD-010: PS-IFC-010-3W-IV, PS-IFC-010-3W-WH-120/277V,
FD-010-120V, FD-010-277V
Leviton Centura Fluorescent Control System,
IllumaTech™ IP7 Series, DPSPE-212
ZP600FAM120, MP1500FAM120, V2000FAMU
LEQ BC, LEQ LVBC, SLD LVBC, SQ1DC
DVTV, NTFTV
ISD BC 120/277

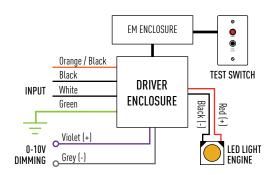


LUTRON ECOSYSTEM® DIMMING

- 120V or 277V
- Dims down to less than 1% or 5% light output
- Consult dimming manufacturer for installation instructions

COMPATIBLE DIMMERS


<u>Product</u>	Part Number(s)
EcoSystem	CS-1L-WM, CS-2L-WM, CS-1L-CM, CS-2L-CM,
	EcoSystem ESN, Grafik Eye QS with EcoSystem, Quantum

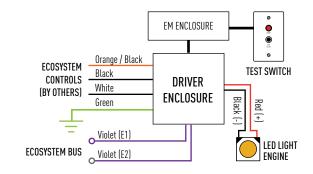

DMX512 RDM DIMMING

- 120V or 277V
- Dims down to 0.1% light output

- RDM channel programmable

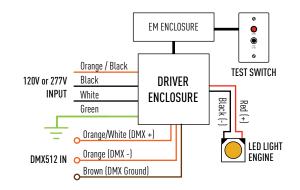

INSTRUCTION L/M-DB01:18 P-5

