Installation Instructions

Risk of injury or damage. Luminaire will

fail if not installed properly. Follow

installation instructions.

WARNING Risk of injury. Wear safety glasses and gloves during installation and servicing. Allow ample time to cool before handling.


3.5" MX Pendant - Surface Mounted

WARNING IMPORTANT SAFETY INSTRUCTIONS Read all installation instructions before installing. It is important to save these instructions. Row addle installation instructions before installing. It is important to save these instructions. Only install and connect LED module with power disconnected at the circuit breaker. Hot plugging, or connecting the module with power on, could damage the LEDs and is not covered by warranty. Observe and follow all label information and instructions regarding dry, damp and wet location listings, proper Intense LED module, warnings of installation near combustible materials and/or insulation.

- Be sure to connect ground wire to prevent electric shock or other potential hazards.
- The product must be installed in a manner consistent with the intended use and in compliance with the national electrical codes and local
 codes by a person familiar with the construction and operation of the product and the hazards involved.
- WARNING: Use only Intense Lighting trims listed for use with this fixture. Use of trims other than those listed by Intense Lighting is a violation of N.E.C 110-3(B) and voids all warranties.


ATTACH MOUNTING BRACKET TO JUNCTION BOX:

- 1. Attach mounting bracket to 4 inch junction box with mud cover riser by two 8-32 fasteners (supplied by others)
- 2. Make sure connecting wires come through center clearance area on bracket for wire connections

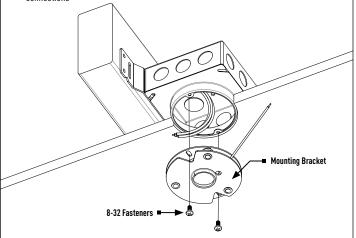

SURFACE FIXTURE INSTALLATION (CONT.)

- 1. Push excess wires through center clearance area of mounting bracket
- Lift fixture against mounting bracket at keyed slots and once sprung back engaged fixture with clockwise turn
- 3. Make sure gap between ceiling and fixture is even to ensure fixture is fully installed

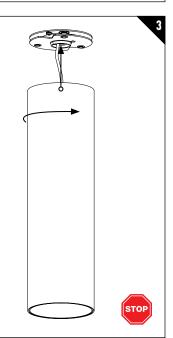


INSTRUCTIONS L/M-01052022 P-1

INTENSE LIGHTING | 3340 E La Palma Ave, Anaheim, CA 92806 | tel 714 630-9877 | fax 714 630-9883 For Intense Lighting's limited product warranty, go to www.intenselighting.com. For a printed copy of the warranty, you may call 800 961-5321. © 2022 Intense Lighting, LLC. All rights reserved. Note: This document is subject to change without notice.



SURFACE FIXTURE INSTALLATION

- 1. Temporarily secure fixture close enough to mounting bracket for wiring
- 2. Make electrical connections
- Connect ground wire from universal mounting bracket to green (ground) supply wire and ground wire from fixture, white wire from cylinder to white (neutral) supply wire and black wire from cylinder to black (hot) supply wire. Use UL listed connectors or wire nuts (by others) to make the connections. Connect dimming wires if applicable, see pages 4-5

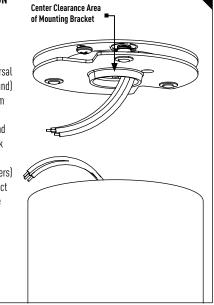


3.5" MX Pendant - Remote Driver & Accessories

Remote Driver Housing Installation

REMOTE BOX INSTALLATION

- Attach remote box at two 1/4" holes on 6 inch centers with frame in installation hardware (supplied by others)
- 2. Remove cover plate
- 3. Remove required knockouts and run conduit to junction box fixture is attached to (**maximum 50 feet length from fixture")
- 4. Run connecting wires for LED driver class 2 by local and national electrical regulations, minimum 18 AWG wire and at maximum 50 feet length
- 5. Make electrical connections (see wiring diagram at the end of this document)
- 6. Reinstall cover plate with supplied 8-32 hardware, insure wires are clear of box edges not pinched or damaged when cover is screwed down

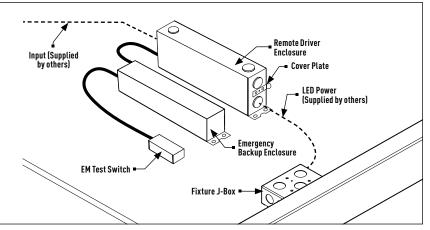


Accessory & Optics Installation


ACCESSORY HOLDER:

- 1. Rotate release cap by turning counter clockwise.
- 2. Install accessories into accessory holder and replace accessory holder's retaining clip.
- 3. Place accessory holder and accessory flush against optic and replace release cap.

OPTIC REPLACEMENT:

- 1. Remove trim, then remove module from channel and disconnect quick connect.
- 2. Rotate release cap by turning counter clockwise.
- 3. Set cap and retainer ring aside and change optics.
- 4. Align optic pins to slots in module.

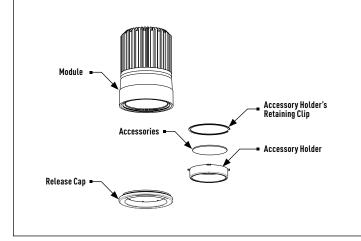

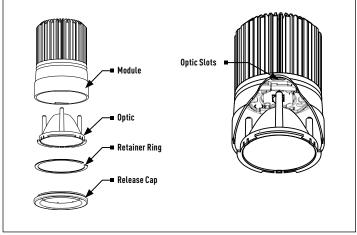



WIRING & DIMMING COMPATIBILITY

For use with all Intense Lighting product with supported dimming options. Please check configuration of product for correct dimming protocol.

Phase Dimming or Lutron® LTEA2W Hi-Lume 2-Wire


e **EM ENCLOSURE** • 120V Only ۲ Forward 1% / Reverse 5% Orange / Black **COMPATIBLE DIMMERS TEST SWITCH** Product Part Number(s) <u>Type</u> Black **120V INPUT** DRIVER Reverse Leviton IPE04 **FROM DIMMER** White **ENCLOSURE** IPI06-1LZ Forward Leviton Blue(-) Red (+) 6633-P Leviton Forward Green DVELV300P Lutron Reverse Lutron DVCL-153P Forward S600P Lutron Forward LED LIGHT DLC03P Cooper Forward ENGINE Cooper DAL06P Forward

0-10V Dimming

- 120V or 277V
- Dims down to 1% or 0.1% light output
- Consult dimming manufacturer for installation instructions and power packs

COMPATIBLE DIMMERS

<u>Manufacturer</u>	<u>Part Number(s)</u>
HUNT	PS-010-IV-120V, PS-010-WH-120V, PS-010-3W-IV-120, PS-010-3W-WH-120V,
	PS-010-IV-277V, PS-010-WH-277V, PS-010-3W-IV-277V, PS-010-3W-WH-277V,
	FD-010: PS-IFC-010-IV, PS-IFC-010-WH-120/277V, FD-010: PS-IFC-010-3W-IV,
	PS-IFC-010-3W-WH-120/277V, FD-010-120V, FD-010-277V
Leviton	Leviton Centura Fluorescent Control System, IllumaTech™ IP7 Series, DPSPE-212
Lightolier	ZP600FAM120, MP1500FAM120, V2000FAMU
Lithonia	LEQ BC, LEQ LVBC, SLD LVBC, SQ1DC
Lutron	DVTV, NTFTV
Synergy	ISD BC 120/277

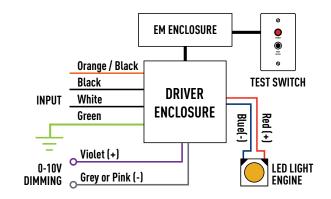


Lutron[®] LDE1 Hi-Lume EcoSystem

- 120V or 277V
- Dims down to 1%
- Consult dimming manufacturer for installation instructions

COMPATIBLE DIMMERS Product Part Number(s)

<u>Product</u> EcoSystem

CS-1L-WM, CS-2L-WM, CS-1L-CM, CS-2L-CM, EcoSystem ESN, Grafik Eye QS with EcoSystem, Quantum

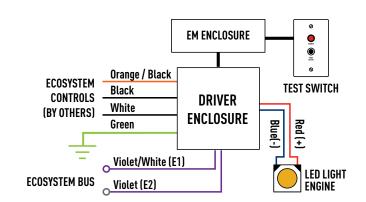





WIRING & DIMMING COMPATIBILITY

For use with all Intense Lighting product with supported dimming options. Please check configuration of product for correct dimming protocol.

DMX512 RDM (Cylinders without RJ45)

• 120V or 277V

DALI

120V or 277V

• Dims down to 0.1%

- Dims Down to 0.1% Light Output
- RDM Channel Programmable

